



flexifloors

are sexy floors


www.flexiflooring.com
sales@flexiflooring.com

Dance Flex installation/dismantling comprehensive instructions.

Installing a Dance Flex portable floor

Dance Flex is dispatched from our warehouse in sections of 9 Dance flex tiles (3 individual tiles x 3 individual tiles). Each Dance Flex individual tile is 300mm x 300mm and therefore each Dance flex section is 900mm x 900mm. Depending on the dimensions of your delivery vehicle, some of our clients change their section sizes down for loading purposes to 600mm x 600mm (2 tiles x 2 tiles). In order to ensure ease of use and a timeous installation we recommend 900mm x 900mm preassembled section sizes.

Each individual Dance flex tile has two edges with male snap clip connectors and two edges with female snap clip connectors. As you will see from the photograph, the female snap clip connectors protrude from each tile. The male snap clip connectors are recessed on the underside of each individual Dance flex tile.

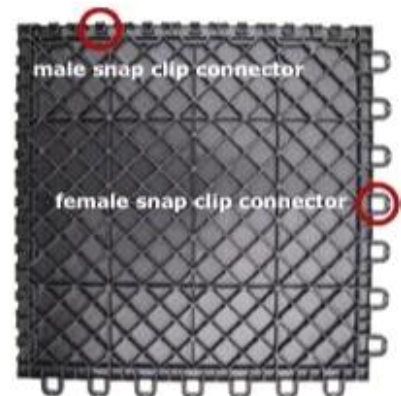

In order to lock two tiles together, you simply place the male snap clip connector above the female snap clip connector and apply a gentle downward pressure. To achieve a firm lock, we suggest that you use a non marking nylon hammer.



It is important that the first Dance Flex section be positioned and laid properly as this ensures a hassle free installation. Always ensure that you position the female snap clips in the direction that you wish to build. Should you start your installation project using the male snap clips, you will find that you will have to continually lift the floor to position the male on top of the female snap clip.





flexifloors
a r e s e x y f l o o r s

www.flexiflooring.com
sales@flexiflooring.com

Please remember to consider the positioning of your first section carefully as this will affect your assembly time and increase your level of frustration. Once Dance flex is locked together it becomes extremely difficult to move the floor without dismantling it. Please ensure that all the sections that are being locked together have the same female/female configuration. Once the floor is completed, begin the installation of the edging strips in a similar manner to ensure that none of the guests trip whilst approaching the floor.



correct



incorrect

Dismantling a Dance flex portable floor

Dismantling is generally 40% of the installation time. We suggest that you start in one of the corners and gently lift the floor. However should you have more man power, we suggest that you use a round metal rod, slide this rod underneath the male snap clip and apply the same downward pressure, ensuring the clip disengages, and each member of the team can tackle his own section.

Storage and maintenance

To ensure the longevity of Dance Flex, we firmly recommend that you clean it after each use to ensure that there is no dirt build up. Dance Flex can be cleaned by using a mop and bucket with a gentle low caustic detergent. We suggest that when the floor is being dismantled, each section is swept clean with a soft domestic brush. Once the Dance Flex has been swept clean, use a mop and bucket with a gentle low caustic detergent to clean the Dance Flex surface. The underside of Dance flex can be cleaned using a High pressure spray machine. It is recommend that Dance Flex is stored on transportation pallets with the underside of the initial section coming into contact with the pallet and thereafter the top side being matched with another top side to prevent scratching or scuffing. We recommend that Dance flex is not stored or installed in direct sunlight or in extreme temperatures.

DO NOT UNDER ANY CIRCUMSTANCE STORE DANCE FLEX SECTIONS ON THEIR SIDES AS THIS WILL DAMAGE THE FEMALE SNAP CLIPS AND WARP YOUR DANCE FLEX PRODUCT.